


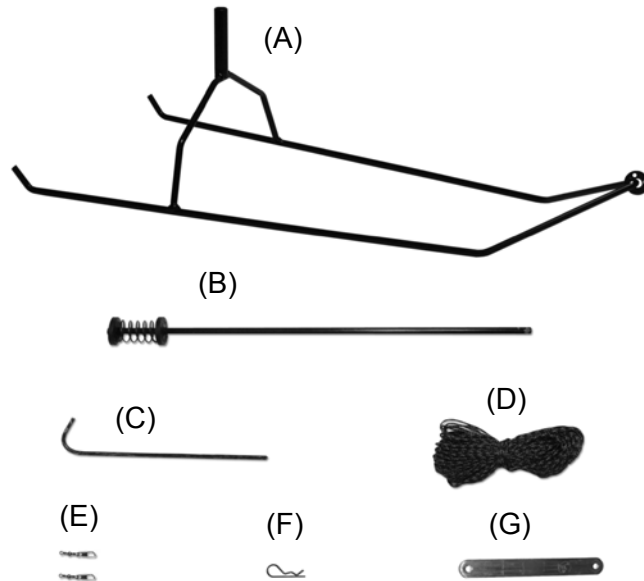

Assembly and use of The Decoy Sled™

Parts included:

- (A) The Decoy Sled™
- (B) Motion Stake™
- (C) Pivot Stakes (2)
- (D) Drag Line - 50'
- (E) Easy-Snap Swivels (2)
- (F) Hair Pin
- (G) Weights (2)
- Fishing Line (not pictured)
- DVD (not pictured)



Assembling your Decoy Sled:

- 1.) Insert Motion Stake (B) into decoy from the bottom, so the spring-end of the Motion Stake is at the top of the decoy and the tip of the Motion Stake is sticking out the top of your decoy.
- 2.) Secure with hair pin (F) placed into the slot at the top of the Motion Stake.
- 3.) Place the bottom of the Motion Stake into the round opening on the top of The Decoy Sled (A).
- 4.) Tie one of the snap swivels (E) to one end of the fishing line, attach snap swivel to the hole at the front of The Decoy Sled, nearest the decoy.
- 5.) Tie the other end of the fishing line around the neck of the decoy, leaving enough slack in the fishing line to allow the decoy to move slightly from side-to-side. Trim excess line if desired.
- 6.) Attach the other snap swivel to one end of the drag line (C) and attach swivel to the hole at the front of The Decoy Sled.

Using your Decoy Sled:

- 1.) Insert the pivot stake into the ground 15 - 20 ft. from your blind.
- 2.) To use the pivot stake, run the drag line around the pivot stake.
- 3.) Place the decoy and the Decoy Sled in front of or alongside the blind, with the drag line in your blind so you can pull on the drag line to move the decoy and The Decoy Sled toward an oncoming male turkey.